


New Nightheater FT reticle

The new Nightheater FT reticle is designed for measurement. The FT reticle will allow you to quickly and accurately, range find and determine the correct hold over required for shot after shot over varying distances and wind conditions. Simply the hold over lines and windage markers in the FT reticle are set at 50 millimetres at 100meters. Unlike other reticles we do not use millirans or vectors or factors so you can now easily calculate the distance and with your ammunitions trajectory the correct hold over! Full instructions and reference charts are supplied with each riflescope featuring the FT reticle.

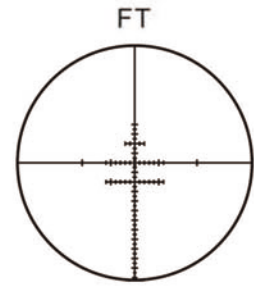

Available Model
NPT62456FT
NPTI62456FTAG
NPT83260FTAGIR
NPT83260FT
NPT105060FT
NPT105060FTAG
NPT105060FTAGIR
NSTT62456FT
NSTT105060FT

FT reticle line measurements in millimetres at increasing meter measurements.

	50	100	200	300	400	500	600	700	800	900	1000
1st line	12.5	25	50	75	100	125	150	175	200	225	250
2nd line	25	50	100	150	200	250	300	350	400	450	500
3rd line	50	100	200	300	400	500	600	700	800	900	1000
4th line	75	150	300	450	600	750	900	1050	1200	1350	1500
5th line	100	200	400	600	800	1000	1200	1400	1600	1800	2000
6th line	125	250	500	750	1000	1250	1500	1750	2000	2250	2500